

## Series 4000 / 5000 / 5005

### Replacing the Hose

1. Wind spool flange clockwise -- facing swivel -- until spring is tight.
2. Back off three turns and latch.
3. Insert hose through roller guide and hole in spool flange.
4. Connect hose fitting to swivel joint and secure hose with clamps.

Reel w/hose	Reel w/o hose	Hose I.D.		Hose Length		# Wraps
4420 OLP	4400 OLP	1/4"	6mm	20'	6m	18
4425 OLP	4400 OLP	1/4"	6mm	25'	8m	18
4435 OLP	4400 OLP	1/4"	6mm	35'	11m	18
5450 OLP	5400 OLP	1/4"	6mm	50'	15m	21
4617 OLP	4600 OLP	3/8"	10mm	17'	5m	13
4625 OLP	4600 OLP	3/8"	10mm	25'	8m	13
5635 OLP	5600 OLP	3/8"	10mm	35'	11m	19
5650 OLP	5605 OLP	3/8"	10mm	50'	15m	21
A5825 OLP	A5800 OLP	1/2"	13mm	25'	8m	13
A5835 OLP	A5805 OLP	1/2"	13mm	35'	11m	21
A5850 OLP	A5806 OLP	1/2"	13mm	50'	15m	21
5435 OMP	5400 OMP	1/4"	6mm	35'	11m	13
5630 OMP	5600 OMP	3/8"	10mm	30'	9m	13
A5825 OMP	A5800 OMP	1/2"	13mm	25'	8m	13
A5835 OMP	A5805 OMP	1/2"	13mm	35'	11m	19
5430 OHP	5400 OHP	1/4"	6mm	30'	9m	13
5435 OHP	5405 OHP	1/4"	6mm	35'	11m	19
5625 OHP	5600 OHP	3/8"	10mm	25'	8m	19

## Series F7000 / FF9000 / FE9000 / FD9000 / F80000 / FD80000

### Replacing the Hose

1. Wind spool flange clockwise -- facing swivel -- until spring is tight.
2. Back off three turns and latch.
3. Insert hose through roller guide.
4. Connect hose fitting to female outlet ell.

### Adjustments

To adjust spring tension, add or remove wraps of hose from the spool, one wrap at a time until desired tension obtained.

Reel w/hose	Reel w/o hose	Hose I.D.		Hose Length		# Wraps
F7925 OLP	F7900 OLP	3/4"	19mm	25'	8m	14
F83050 OLP	F83000 OLP	3/4"	19mm	50'	15m	17
FD83075 OLP	FD83000 OLP	3/4"	19mm	75'	23m	19
FD84050 OLP	FD84000 OLP	1"	25mm	50'	15m	19
FE9350 OLPBW	FE9300 OLPBW	3/4"	19mm	50'	15m	21
FE9450 OLPBW	FE9400 OLPBW	1"	25mm	50'	15m	21
FD9350 OLPBW	FD9300 OLPBW	3/4"	19mm	50'	15m	21
FD9450 OLPBW	FD9400 OLPBW	1"	25mm	50'	15m	21
Not Available	FF9500 OLPBW	1 1/4"	32mm	50'	15m	18
Not Available	FF9600 OLPBW	1 1/2"	38mm	50'	15m	18

## Series 4000 / 5000 Pre-Rinse and Potable Water

### Replacing the Hose

1. Wind spool flange clockwise -- facing swivel -- until spring is tight.
2. Back off three turns and latch.
3. Insert hose through roller guide and hole in spool flange.
4. Connect hose fitting to swivel joint and secure hose with clamps.

### Adjustments

To adjust spring tension, add or remove wraps of hose from the spool, one wrap at a time until desired tension obtained.

Reel w/hose	Reel w/o hose	Hose I.D.		Hose Length		# Wraps
4625 OLPSW5	Not Available	3/8"	10mm	25'	8m	13
5635 OLPSW5	Not Available	3/8"	10mm	35'	11m	19
5635 ELPSW5	Not Available	3/8"	10mm	35'	11m	19
5635 OLSSW5	Not Available	3/8"	10mm	35'	11m	19
5635 ELSSW5	Not Available	3/8"	10mm	35'	11m	19
A5835 OLBSW23	Not Available	1/2"	13mm	35'	11m	13