

Series 8000

Replacing the Hose

1. Wind spool flange clockwise -- facing swivel -- until spring is tight.
2. Back off two turns and latch.
3. Insert hose through roller guide.
4. Connect hose fitting to female outlet ell.

Adjustments

To adjust spring tension, add or remove wraps of hose from the spool, one wrap at a time until desired tension obtained.

Reel w/hose	Reel w/o hose	Hose I.D.		Hose Length		# Wraps
D8650 OLP	D8600 OLP	3/8"	10mm	50'	15m	19
D8670 OLP	D8600 OLP	3/8"	10mm	70'	22m	22
D8850 OLP	D8800 OLP	1/2"	13mm	50'	15m	18
E8850 OLP	E8800 OLP	1/2"	13mm	50'	15m	18
D8650 OMP	D8600 OMP	3/8"	10mm	50'	15m	16
D8840 OMP	D8800 OMP	1/2"	13mm	40'	13m	16
D8850 OMP	D8800 OMP	1/2"	13mm	50'	15m	16
E8850 OMP	E8800 OMP	1/2"	13mm	50'	15m	16
D8450 OHP	D8400 OHP	1/4"	6mm	50'	15m	16
D8650 OHP	D8600 OHP	3/8"	10mm	50'	15m	16
E8650 OHP	E8600 OHP	3/8"	10mm	50'	15m	16