

## Series 8000

### Replacing the Hose

1. Wind spool flange clockwise -- facing swivel -- until spring is tight.
2. Back off two turns and latch.
3. Insert hose through roller guide.
4. Connect hose fitting to female outlet ell.

### Adjustments

To adjust spring tension, add or remove wraps of hose from the spool, one wrap at a time until desired tension obtained.

Reel w/hose	Reel w/o hose	Hose I.D.		Hose Length		# Wraps
D8650 OLP	D8600 OLP	3/8"	10mm	50'	15m	19
D8670 OLP	D8600 OLP	3/8"	10mm	70'	22m	22
D8850 OLP	D8800 OLP	1/2"	13mm	50'	15m	18
E8850 OLP	E8800 OLP	1/2"	13mm	50'	15m	18
D8650 OMP	D8600 OMP	3/8"	10mm	50'	15m	16
D8840 OMP	D8800 OMP	1/2"	13mm	40'	13m	16
D8850 OMP	D8800 OMP	1/2"	13mm	50'	15m	16
E8850 OMP	E8800 OMP	1/2"	13mm	50'	15m	16
D8450 OHP	D8400 OHP	1/4"	6mm	50'	15m	16
D8650 OHP	D8600 OHP	3/8"	10mm	50'	15m	16
E8650 OHP	E8600 OHP	3/8"	10mm	50'	15m	16